



EMPFEHLUNG für HOLZBAU

FEUCHTRÄUME / NASSBEREICHE


Bei feuchtigkeitsempfindlichen tragenden Teilen (Holzdeckenkonstruktion) ist in feuchtigkeitsbeanspruchten Räumen eine diffusionsoffene Dampfbremse mit Hochzug, auf Rohbauebene zu empfehlen.

In normal beanspruchten Räumen (ohne regelmäßige Wasserbeanspruchung) muss keine Dampfbremse auf Decken verlegt werden.



WÄNDE

Bei Holzbauwänden muss keine Dampfbremse verwendet werden. Bei Gipskartonwänden ab einer Thermowhite-Einbaustärke >20cm ist ein Hochzug mittels Dampfbremse, Dichtanstrich oder ähnliches zu empfehlen.

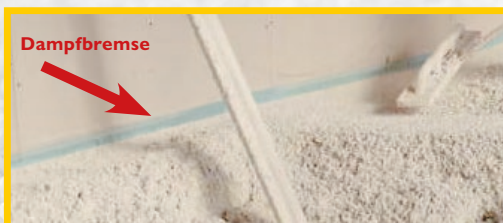



RECOMMENDATION for WOOD CONSTRUCTION

DAMP ROOMS AND WET AREAS

In the case of moisture-sensitive load-bearing parts (wooden ceiling construction), a vapor barrier open to diffusion with high draught, at shell level, is recommended.

In normal rooms (without regular water load) it is not necessary to install a vapor barrier.



WALLS

A vapor barrier does not have to be used for wooden construction walls. For gypsum plasterboard walls with a ThermoWhite installation thickness > 20 cm, a high draught by means of a vapor barrier, sealing coat or similar is recommended.

